




# KEY-OVERRIDE-ALL


Made in Canada Rev.C- 25 / 05 / 2009  
Web site: <http://www.ifar.ca>

ENCRYPTED TRANSPONDER BYPASS MODULE ( Self Learning )


**LED Module Diagnostics :**  
On: Activated.  
OFF: Not activated.  
Flash: Not programmed.

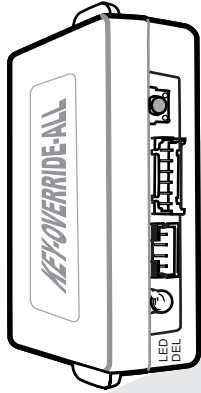

Front view of the module

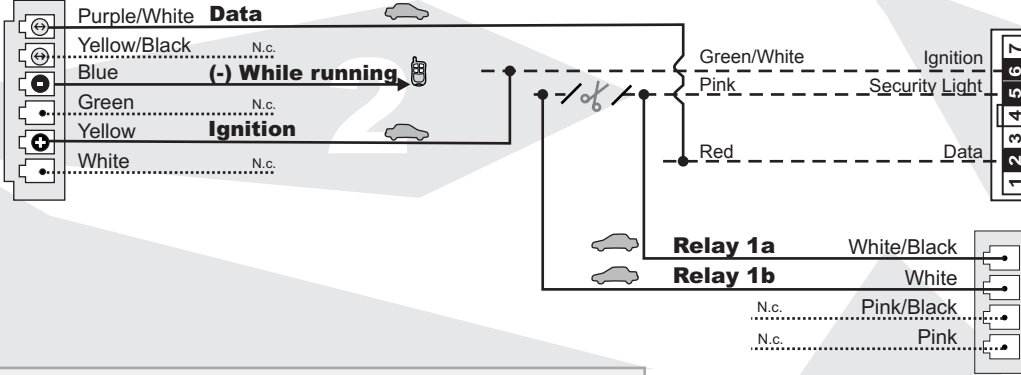

Determine the type of installation:

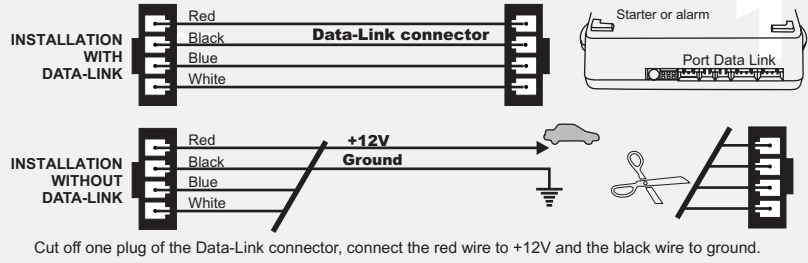

**Connector 4 (4 pins):**  
Connect with the FLASH LINK UPDATER for web update.



Back view of the module

Connect wire to Remote-Starter/Alarm Connect wire to vehicle

○ OUTPUT ● INPUT

## 1 Make the connections to the vehicle:

**1.A Connector 1 (Black):**  
Determine the type of installation:  
- INSTALLATION WITH DATA-LINK  
- INSTALLATION WITHOUT DATA-LINK

**1.B Connector 2 (White):** Make the connections

**1.c Connector 3 (White):** Make the connections

**2** Press and hold the programming button. Insert **connector 1**.

**3** Insert **connector 2**.  
If the LED is flashing at this point the module is already programmed and can't be programmed again. (To prevent malicious use this module can be programmed in only one vehicle.)

**4** While holding the programming button. Insert **connector 3**.

**5** Release the programming button when the LED turns ON.

**6** Press **1 time** on the programming button. The LED turns OFF and turns ON.

**7** Press **1 more time** on the programming button and the LED will flash once.

**8** Turn the **Ignition to the ON** position.

**9** **If the LED flashes 10 times, the module is programmed.**  
If the LED stays ON, verify your connections and repeat from step 1.

**10** Turn the Ignition key to the **OFF** position.

**11** Remove the key and start the vehicle using the remote starter to ensure functionality.



**Technical support:**  
TEL: 514-255-HELP (4357)  
FAX: 514-255-1367  
Web: [www.ifar.ca](http://www.ifar.ca)

Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects. This module must be install by qualified technician. This instruction guide may change without notice. Visit [www.ifar.ca](http://www.ifar.ca) to get latest version.

